

CD/DVD Duplicator





Make Copies of CDs and DVDs

When finished converting your VHS tapes to DVD or Vinyl recordings to CD, this machine will make exact copies of your discs*.

*This machine will not copy any discs that have copyright protection.

Instructions:

1. Turn on the unit by pressing the power button on the front of the unit. (bottom right).
2. Once powered on, the display on the LCD control panel will show "1. Copy Disc" indicating the unit is ready to use.
3. Press the eject button on the top Master Drive. Once the tray opens, place the Master Disc in the tray and press the eject button to close the tray.
4. Press the eject button on the bottom DVD/CD Writer Drive. When the tray opens, place a blank recordable DVD/CD disc in the tray and press the eject button to close the tray.
5. After completing steps 3 & 4 the copy process will automatically begin.
6. Upon completion of the copy process, the completed disc will automatically be ejected. Remove completed disc and repeat steps 3-6 to continue copying the process as necessary.

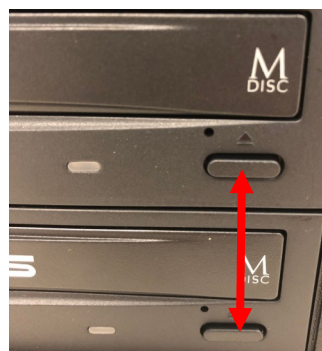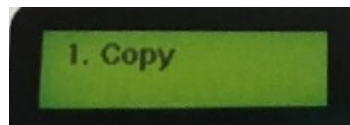

Eject Master

Eject Duplicate

